
## **Basis principles**

Anchor points in the area of the fall protection system should be made more frequently, according to Schüco guidelines

## Distance between anchor points

Max. 100mm from the fall protection border (bottom and top)

Max. 300mm distance between each anchor point

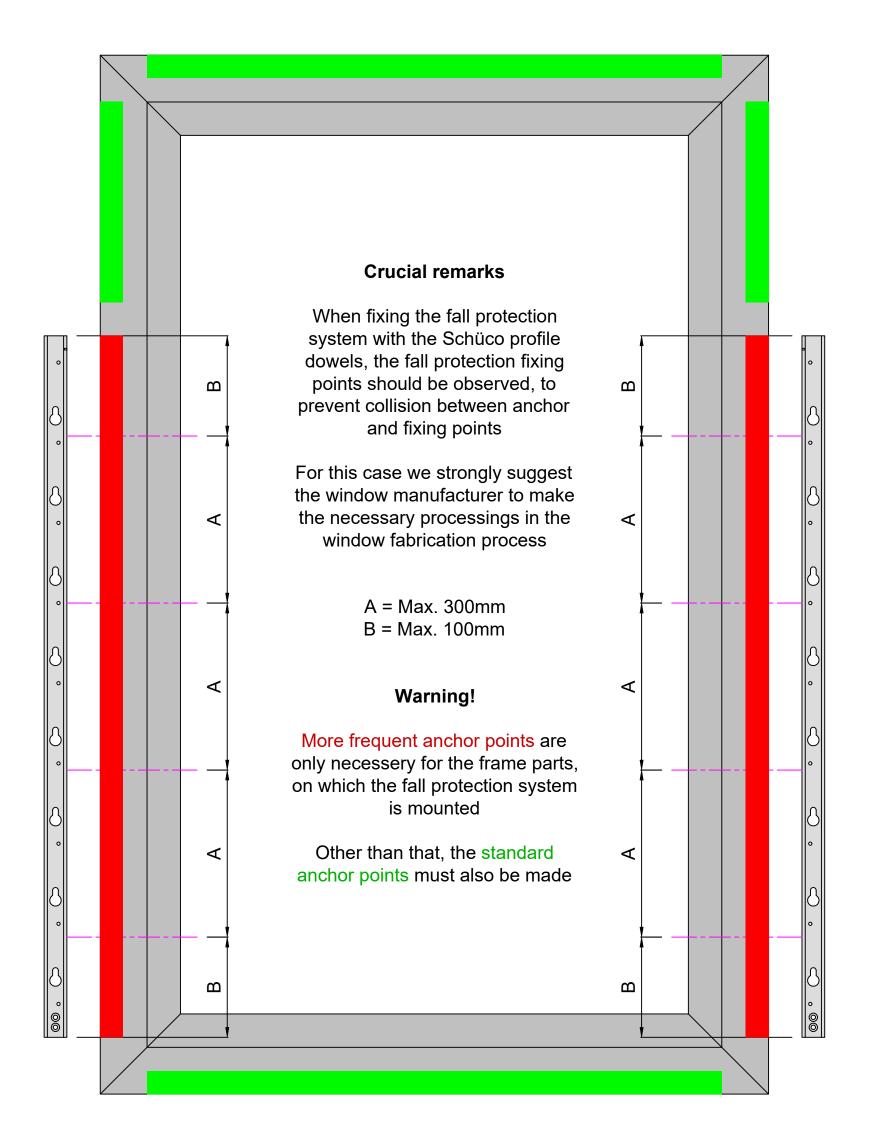

## **Anchor point areas**

Anchor points should be made more frequent only on the frame parts, on which the fall protection system is fixed, respectfully

Standard anchor points are also required, max. 150mm from the inner frame/mullion edge. Also the distance between each anchor point can not exceed 600mm

