

Fundamentals

For the program to run properly, the machine operator must input the **fall prorection height** for each window respectfully. The machine stores the value as paramter and positions the machining at designated locations on the frame.

Please, keep in mind to add extra 3mm in the program as a welding correction for the bottom of the profile.

