


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

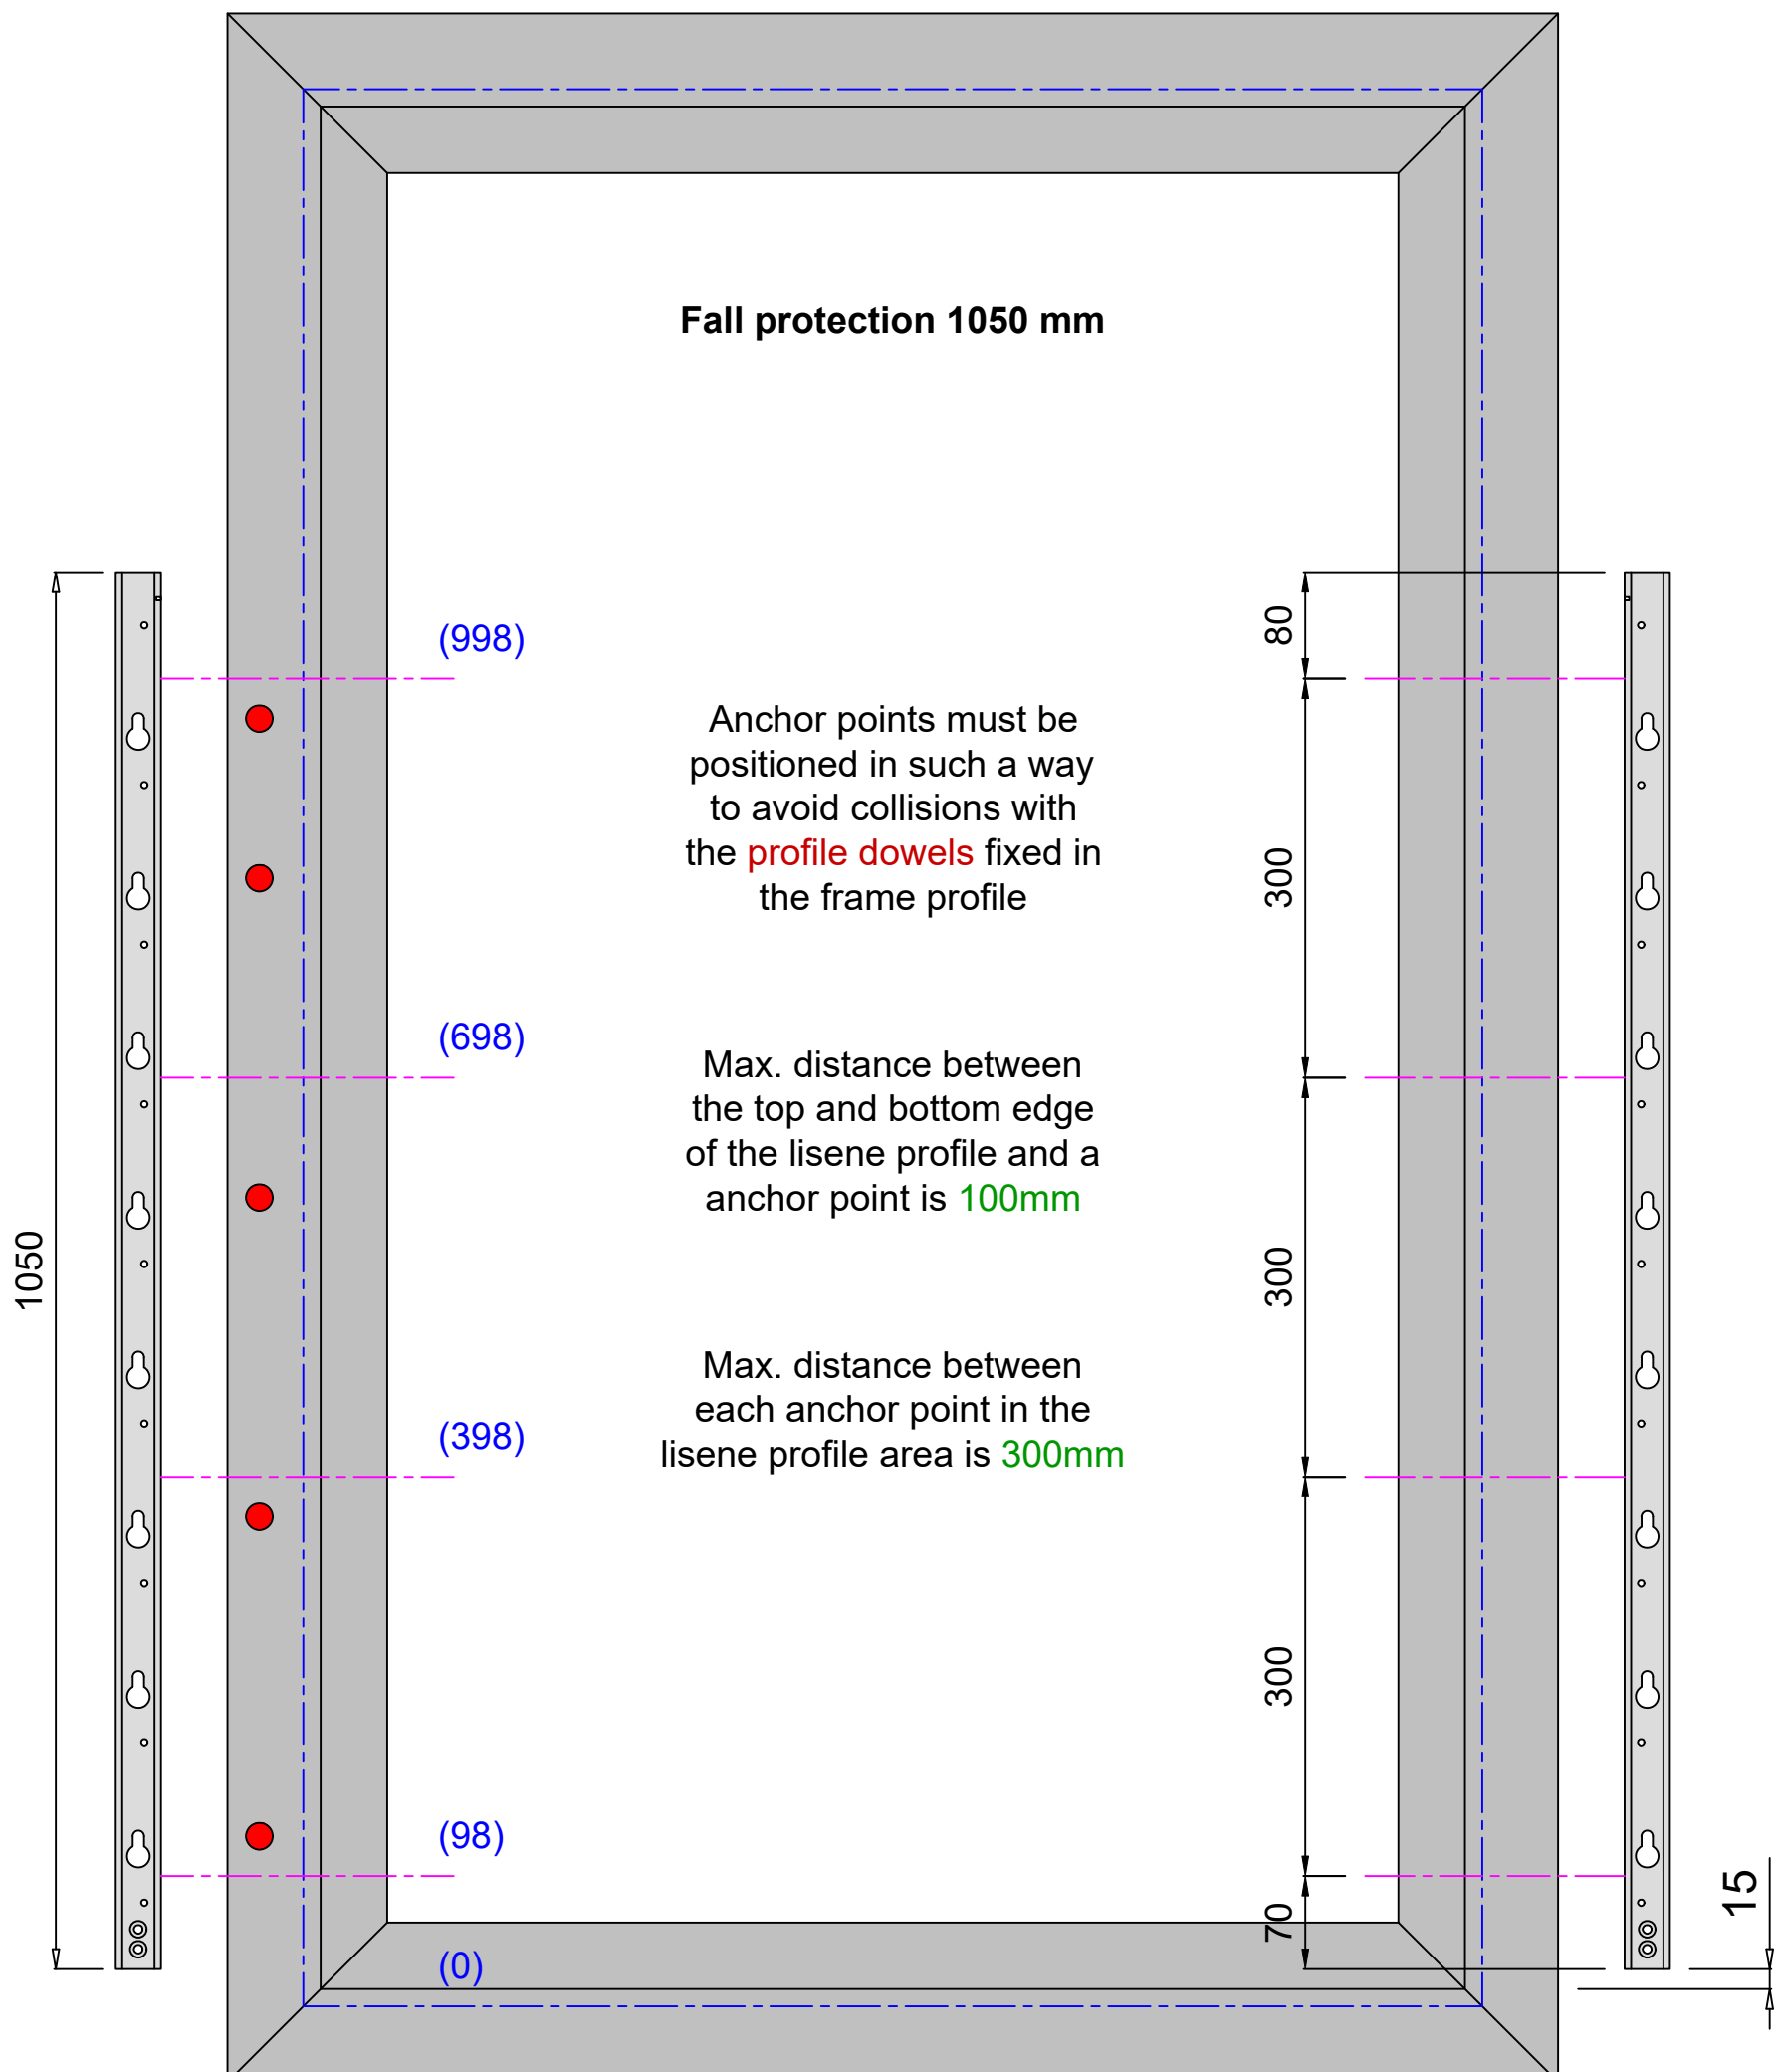


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

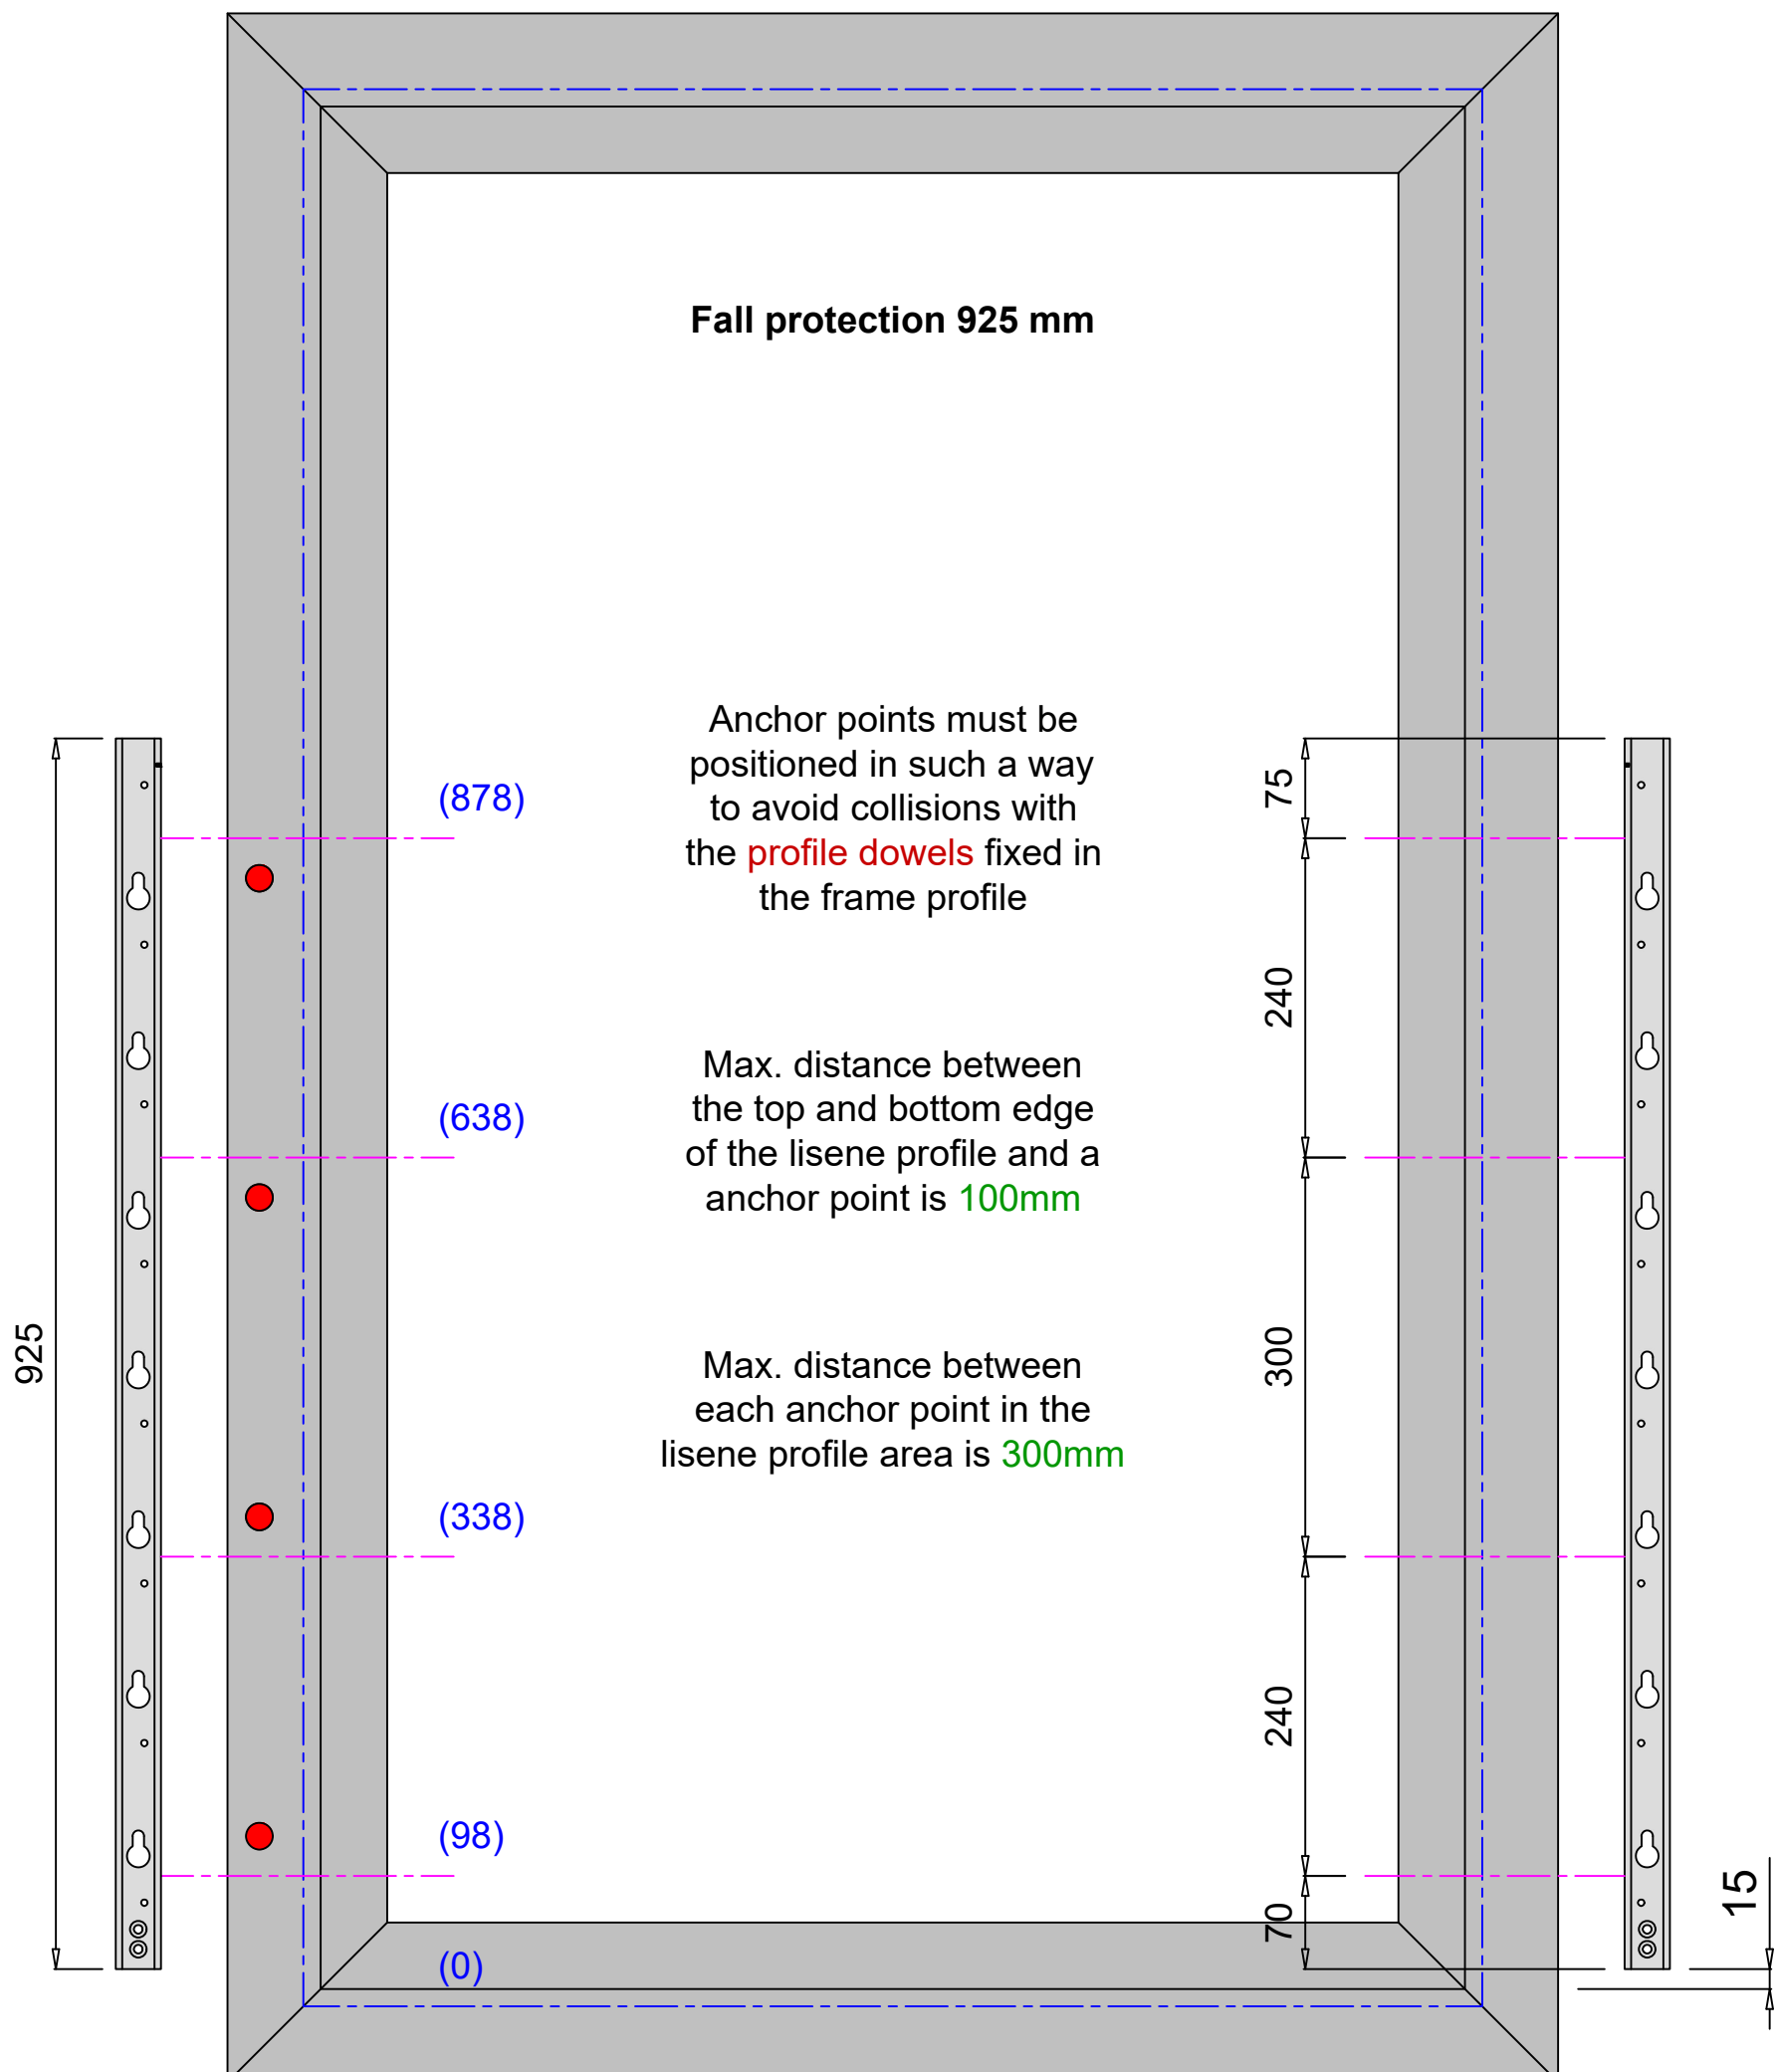


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

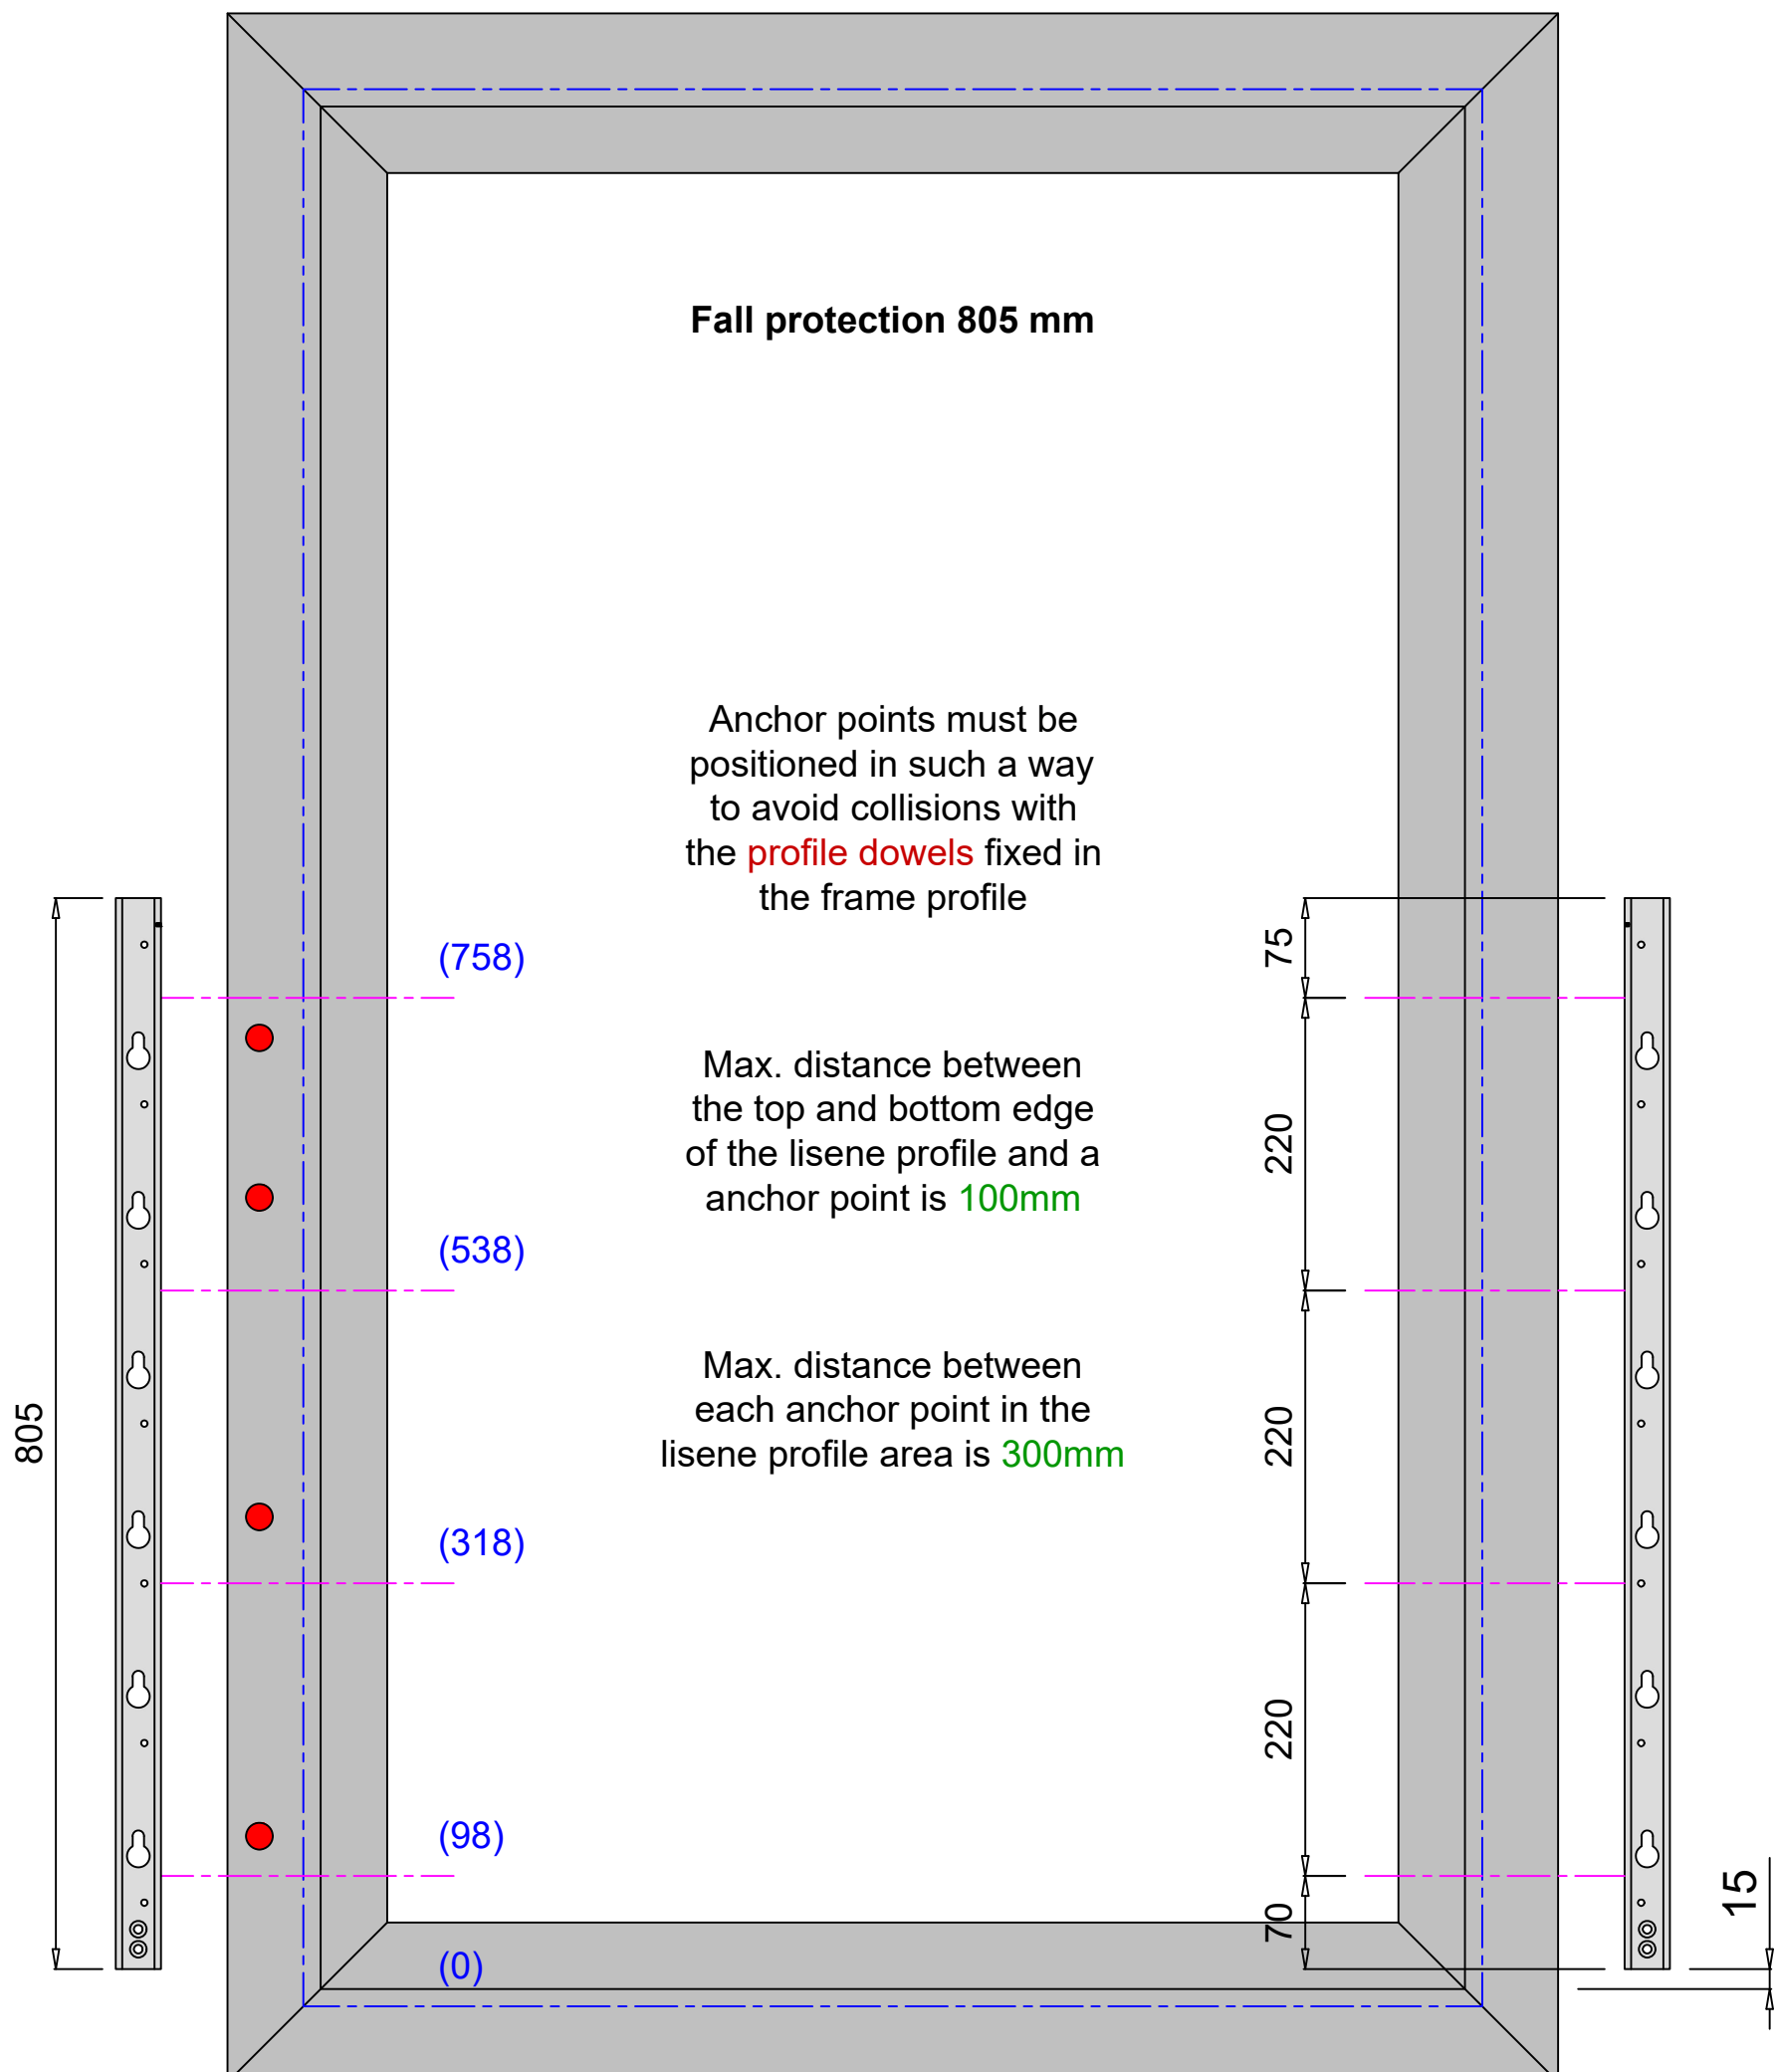


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

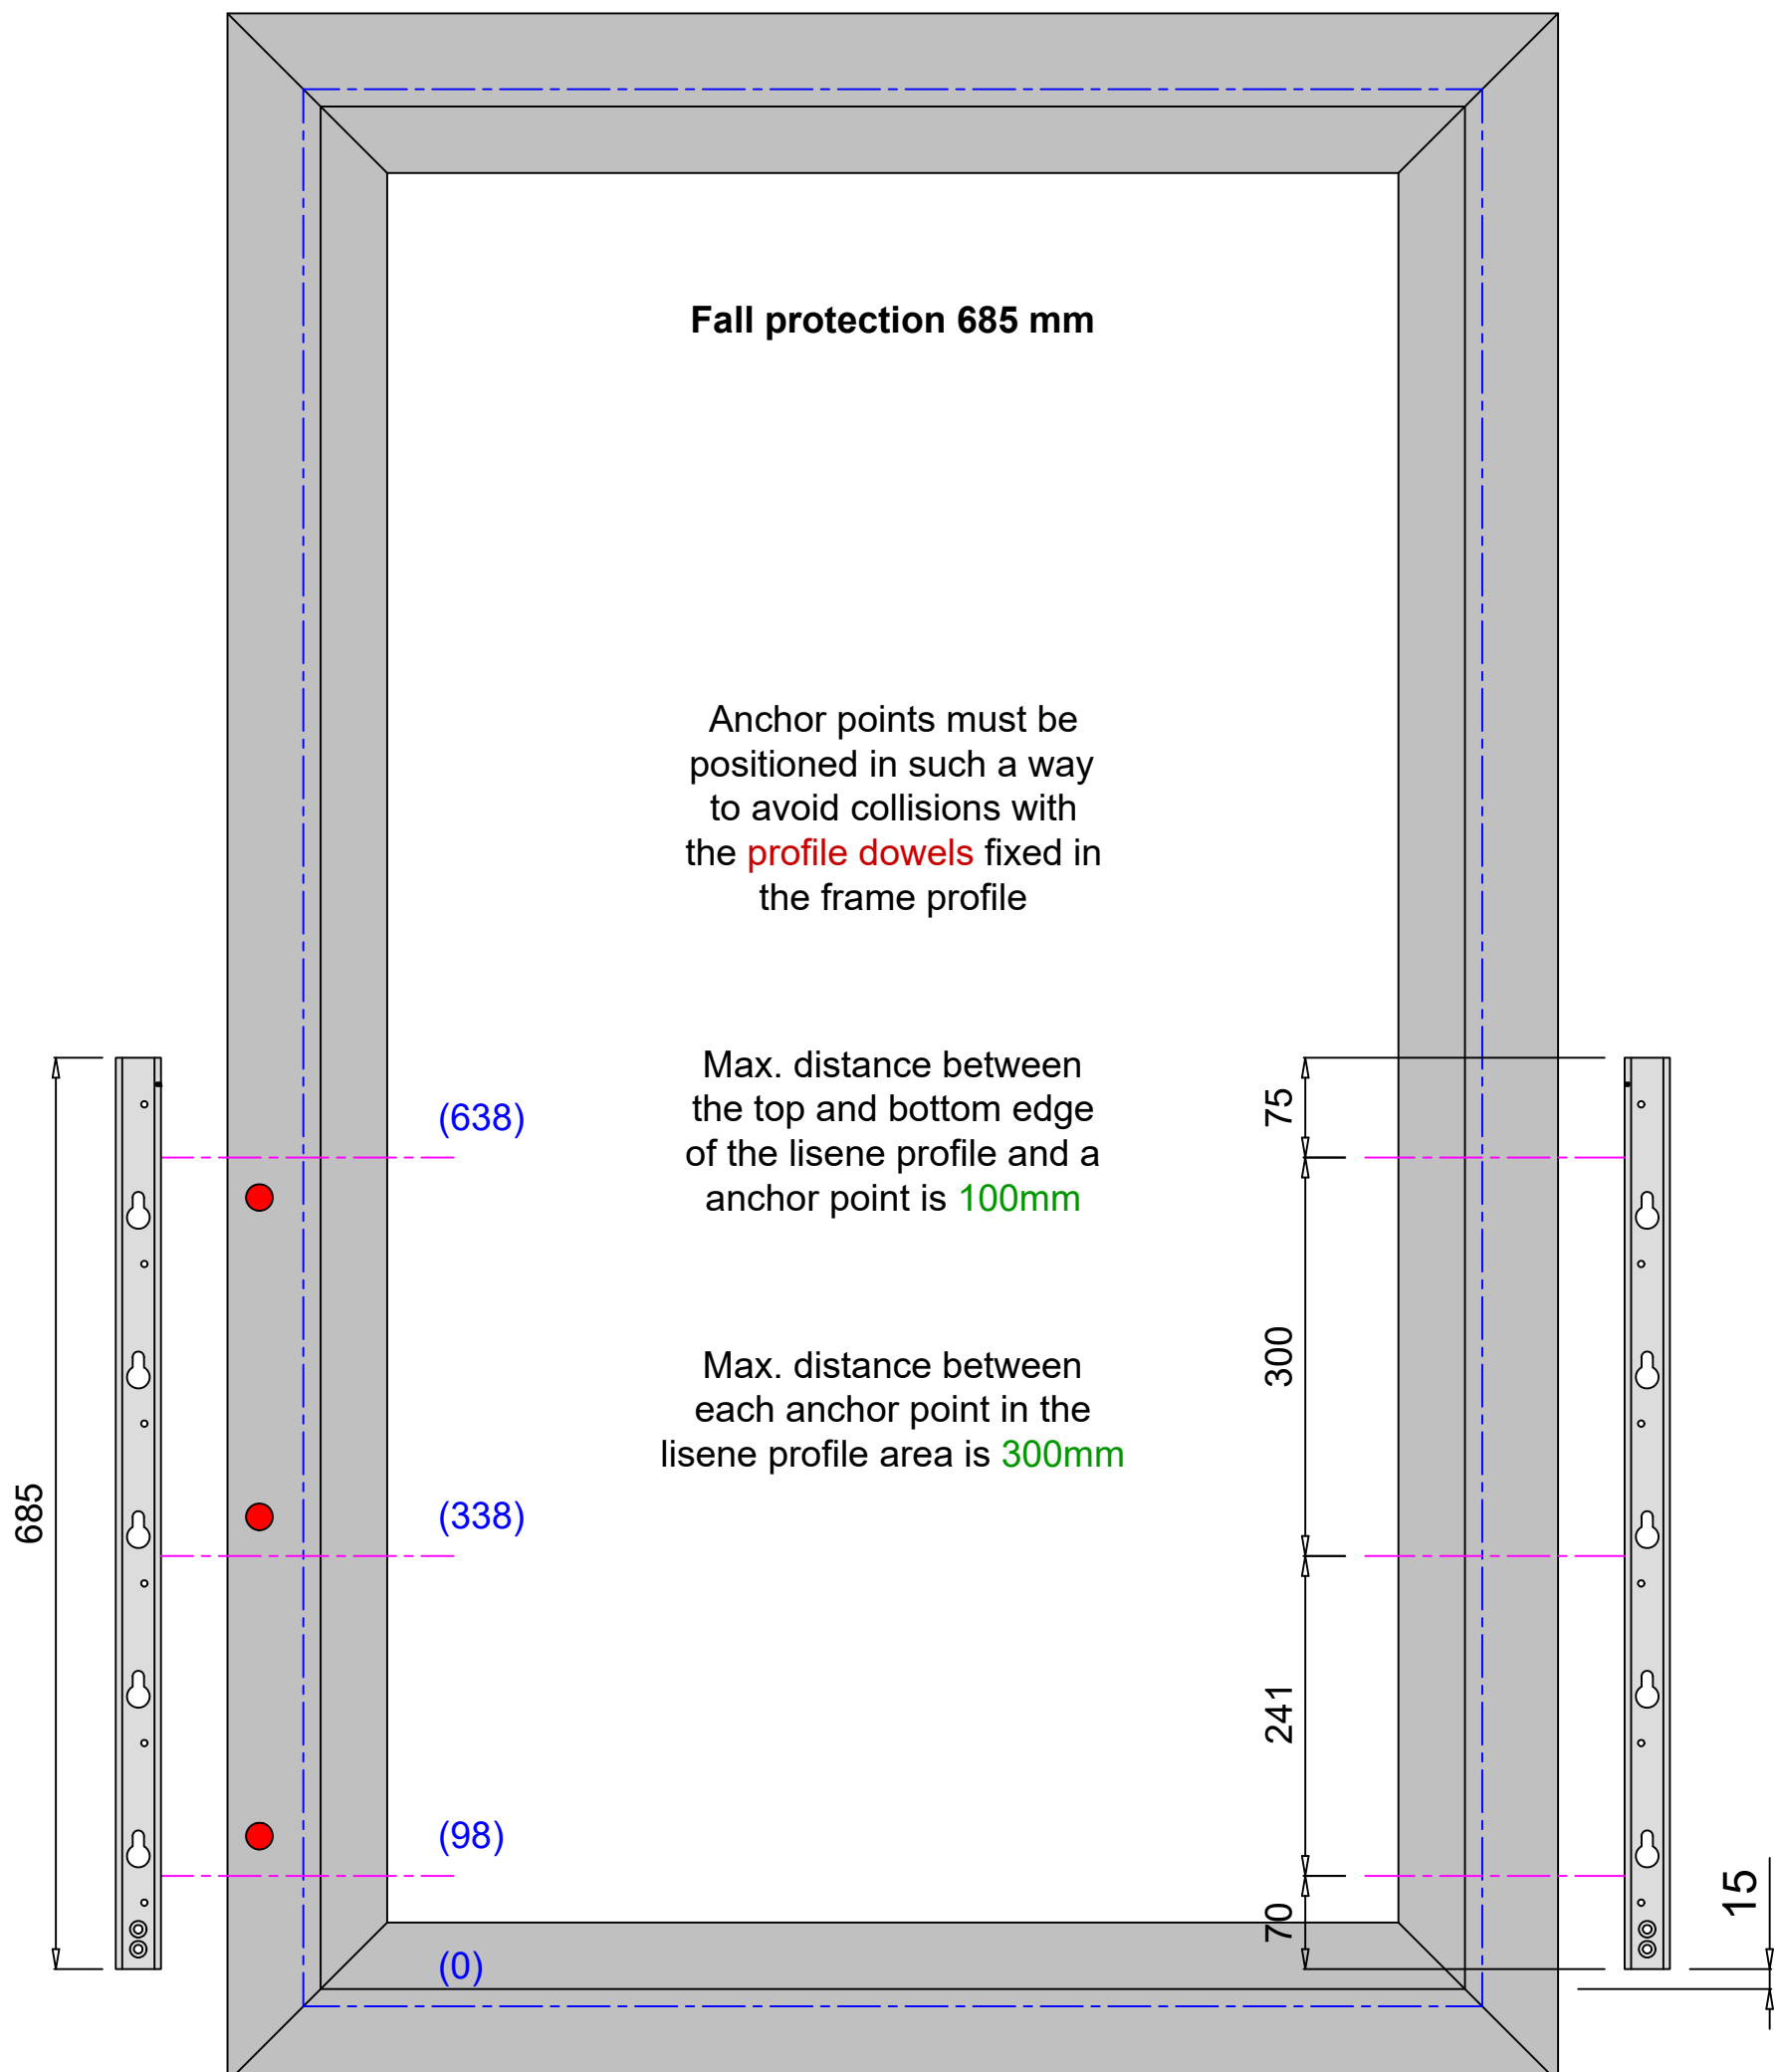


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

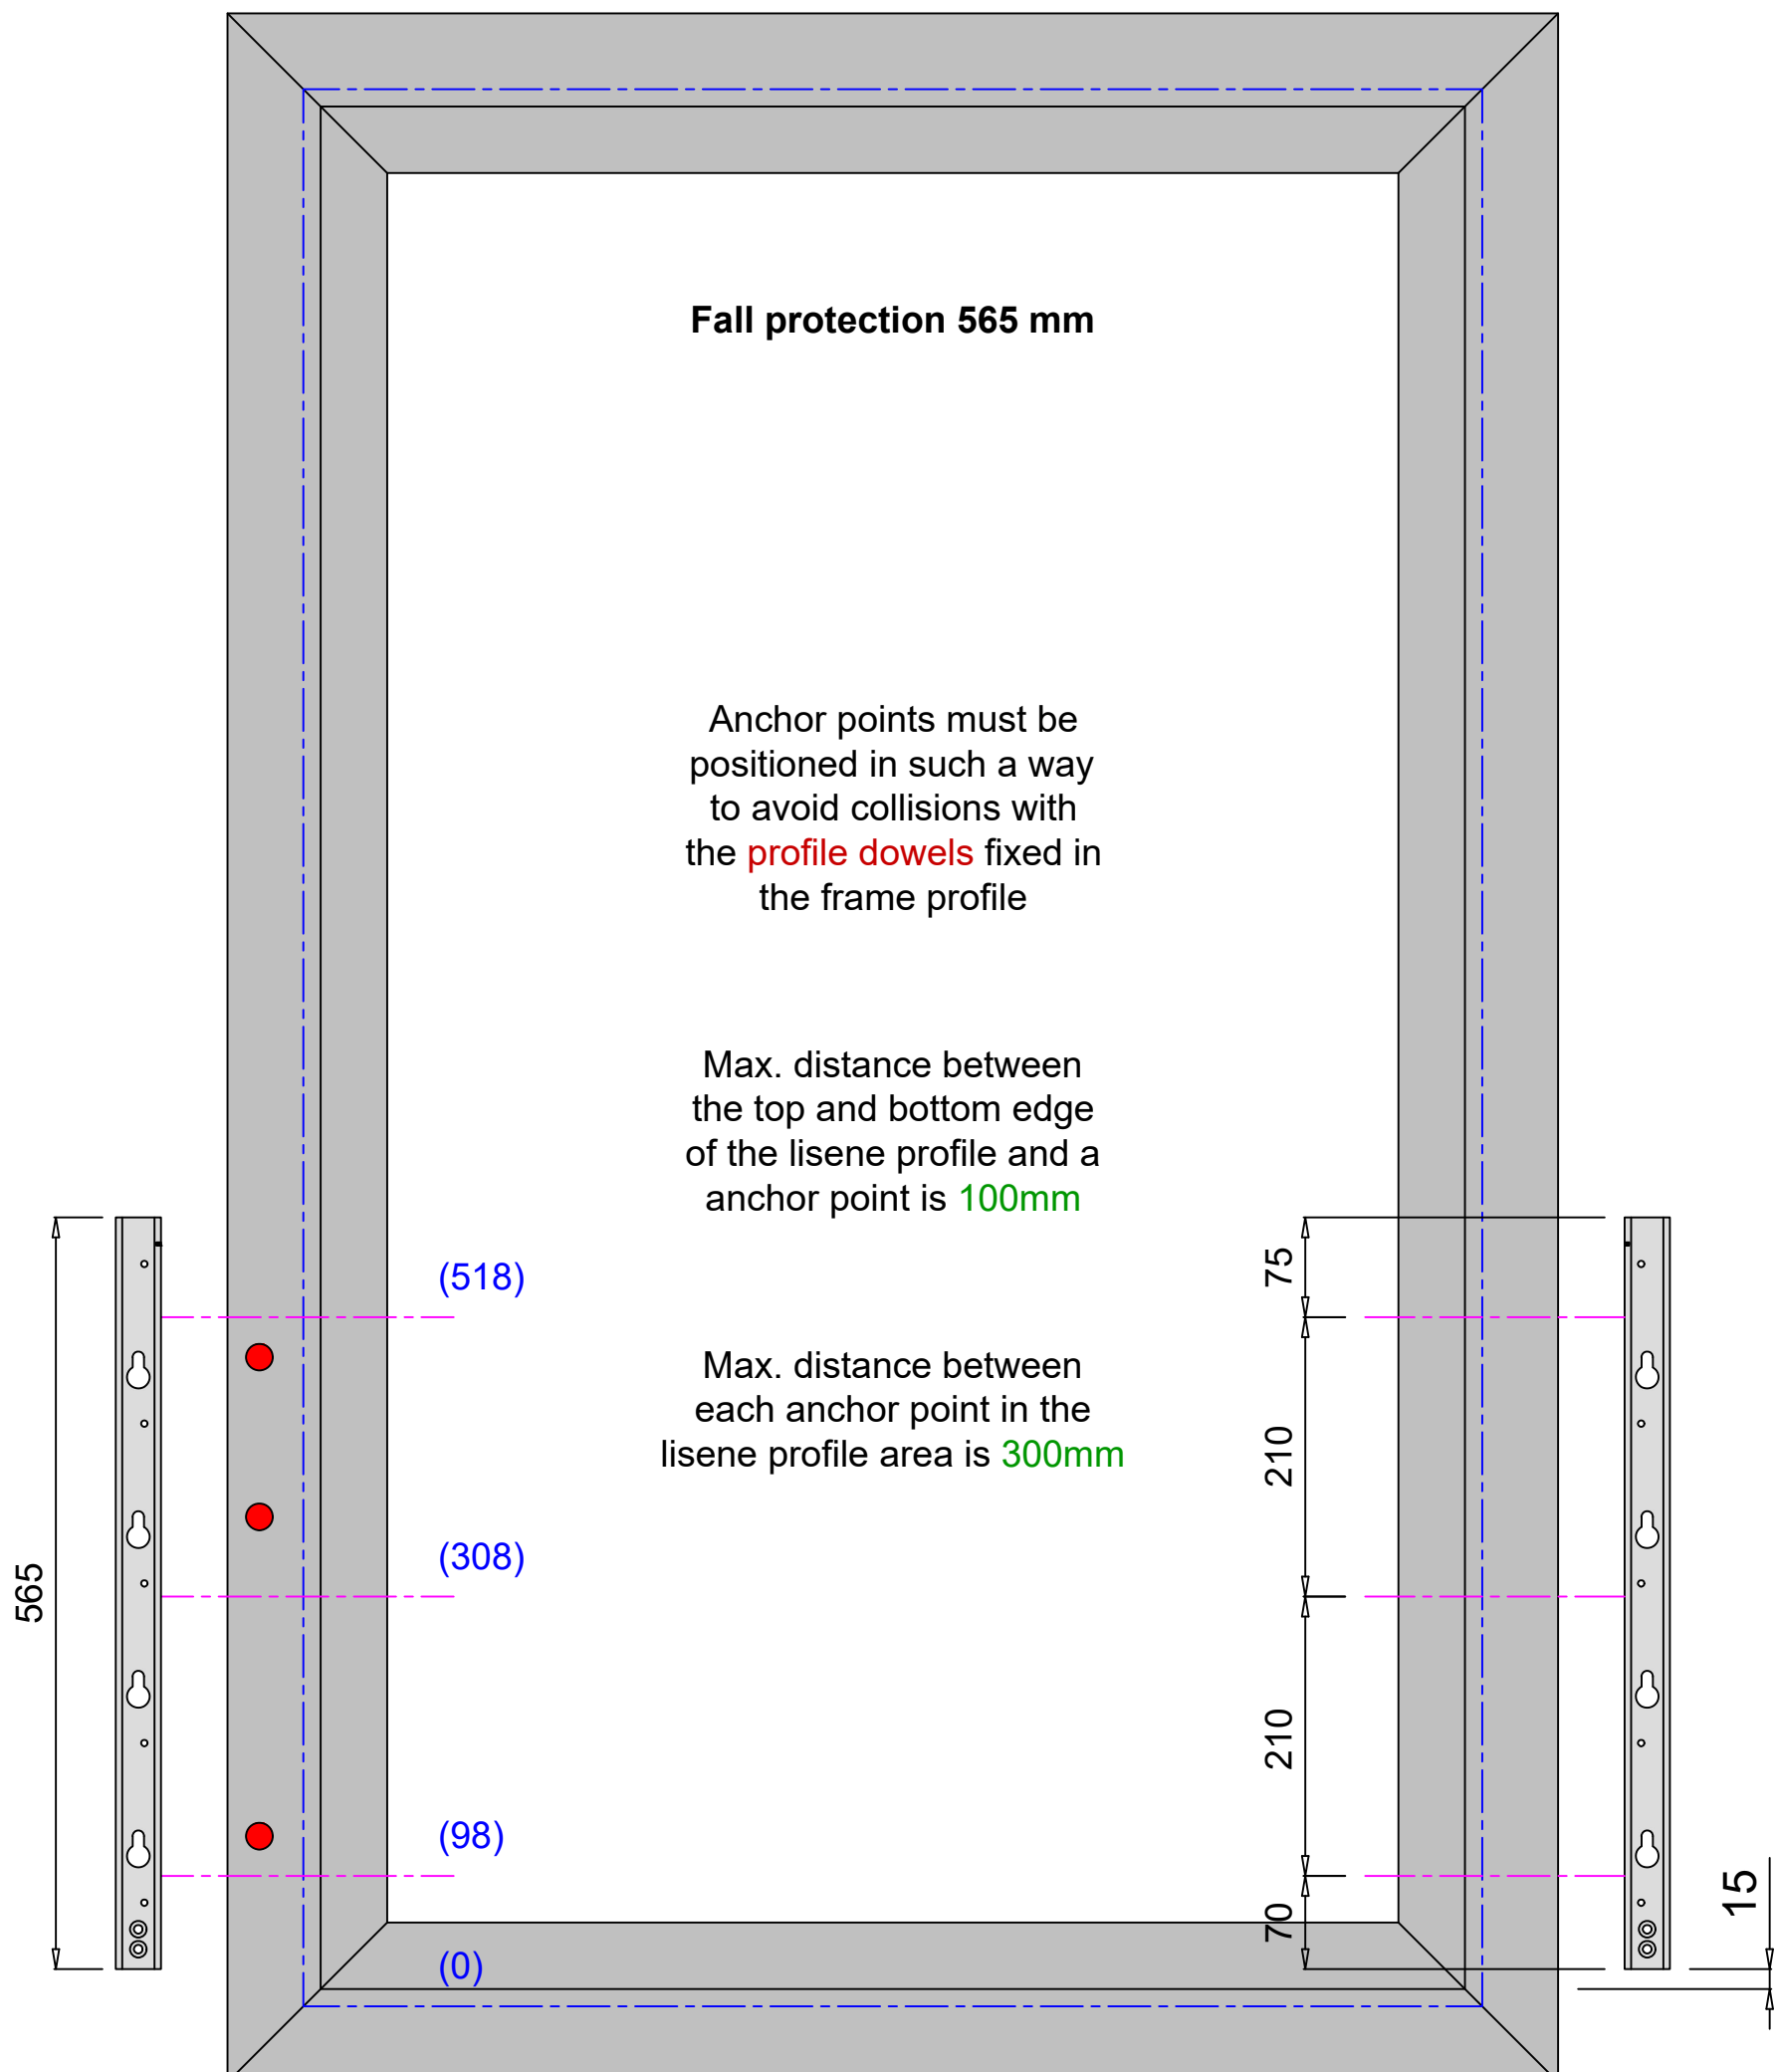


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

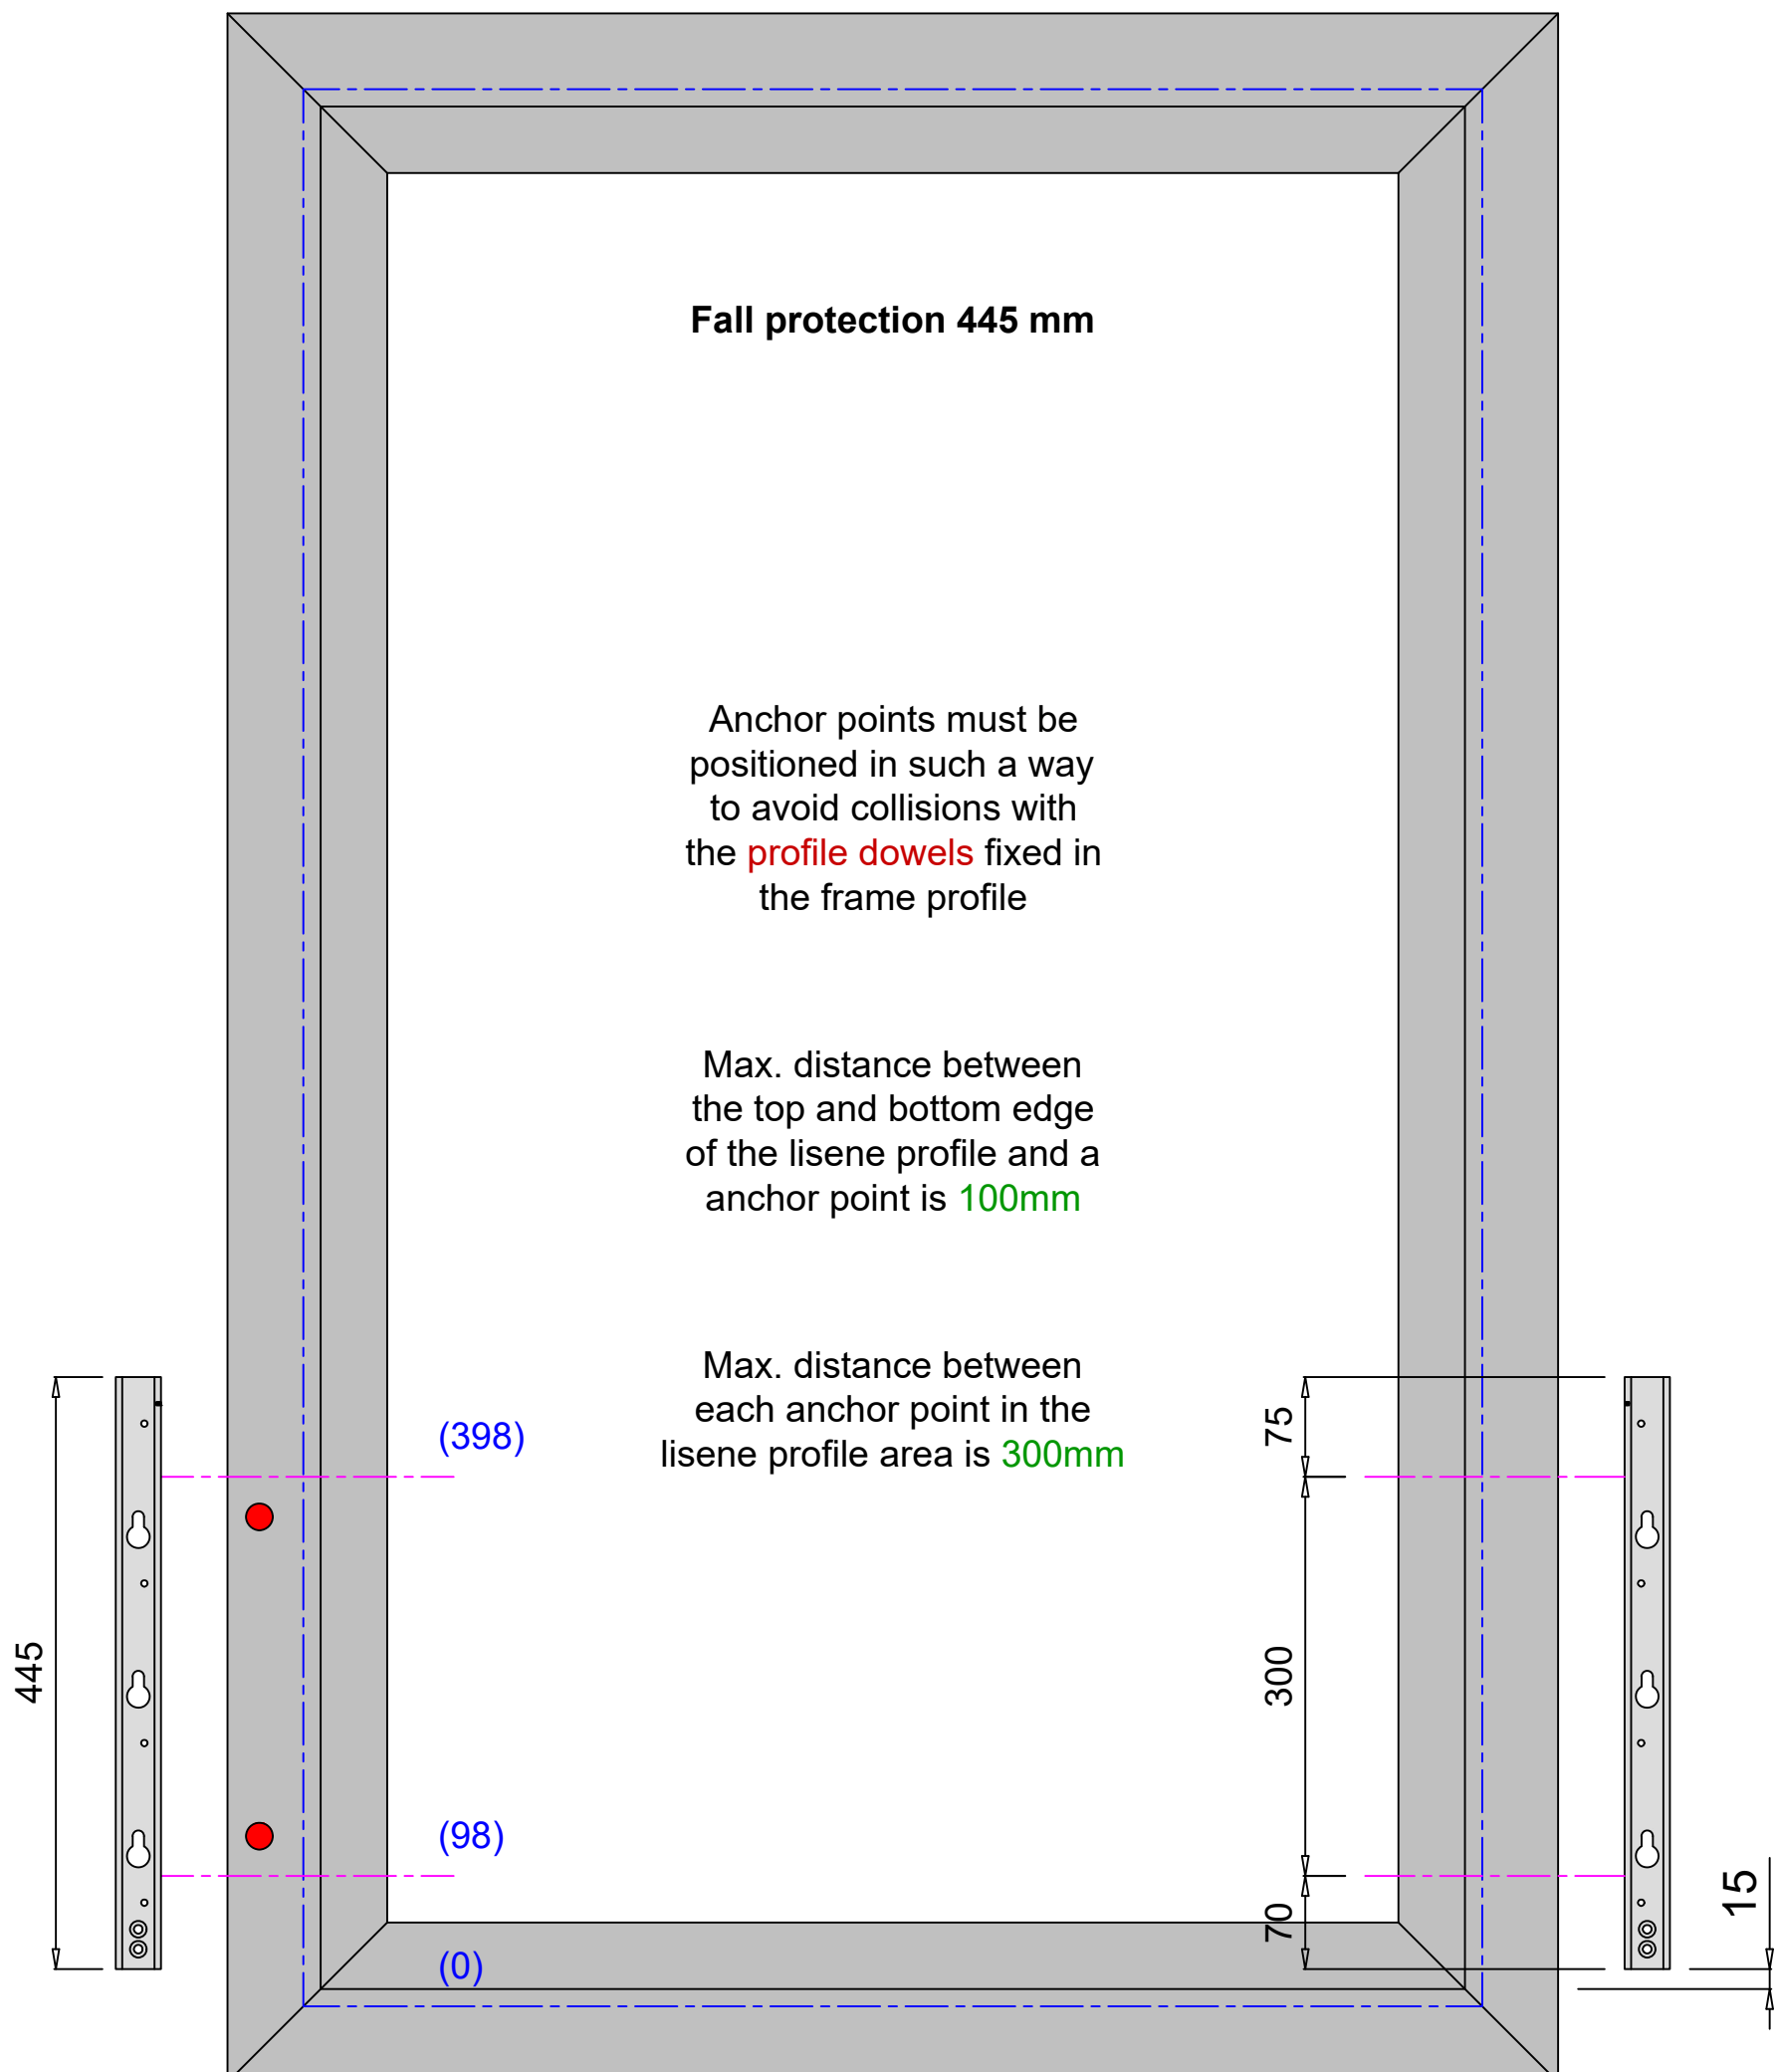


Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Standard anchor point holes are then later being moved, using the prohibited areas, to prevent collisions.

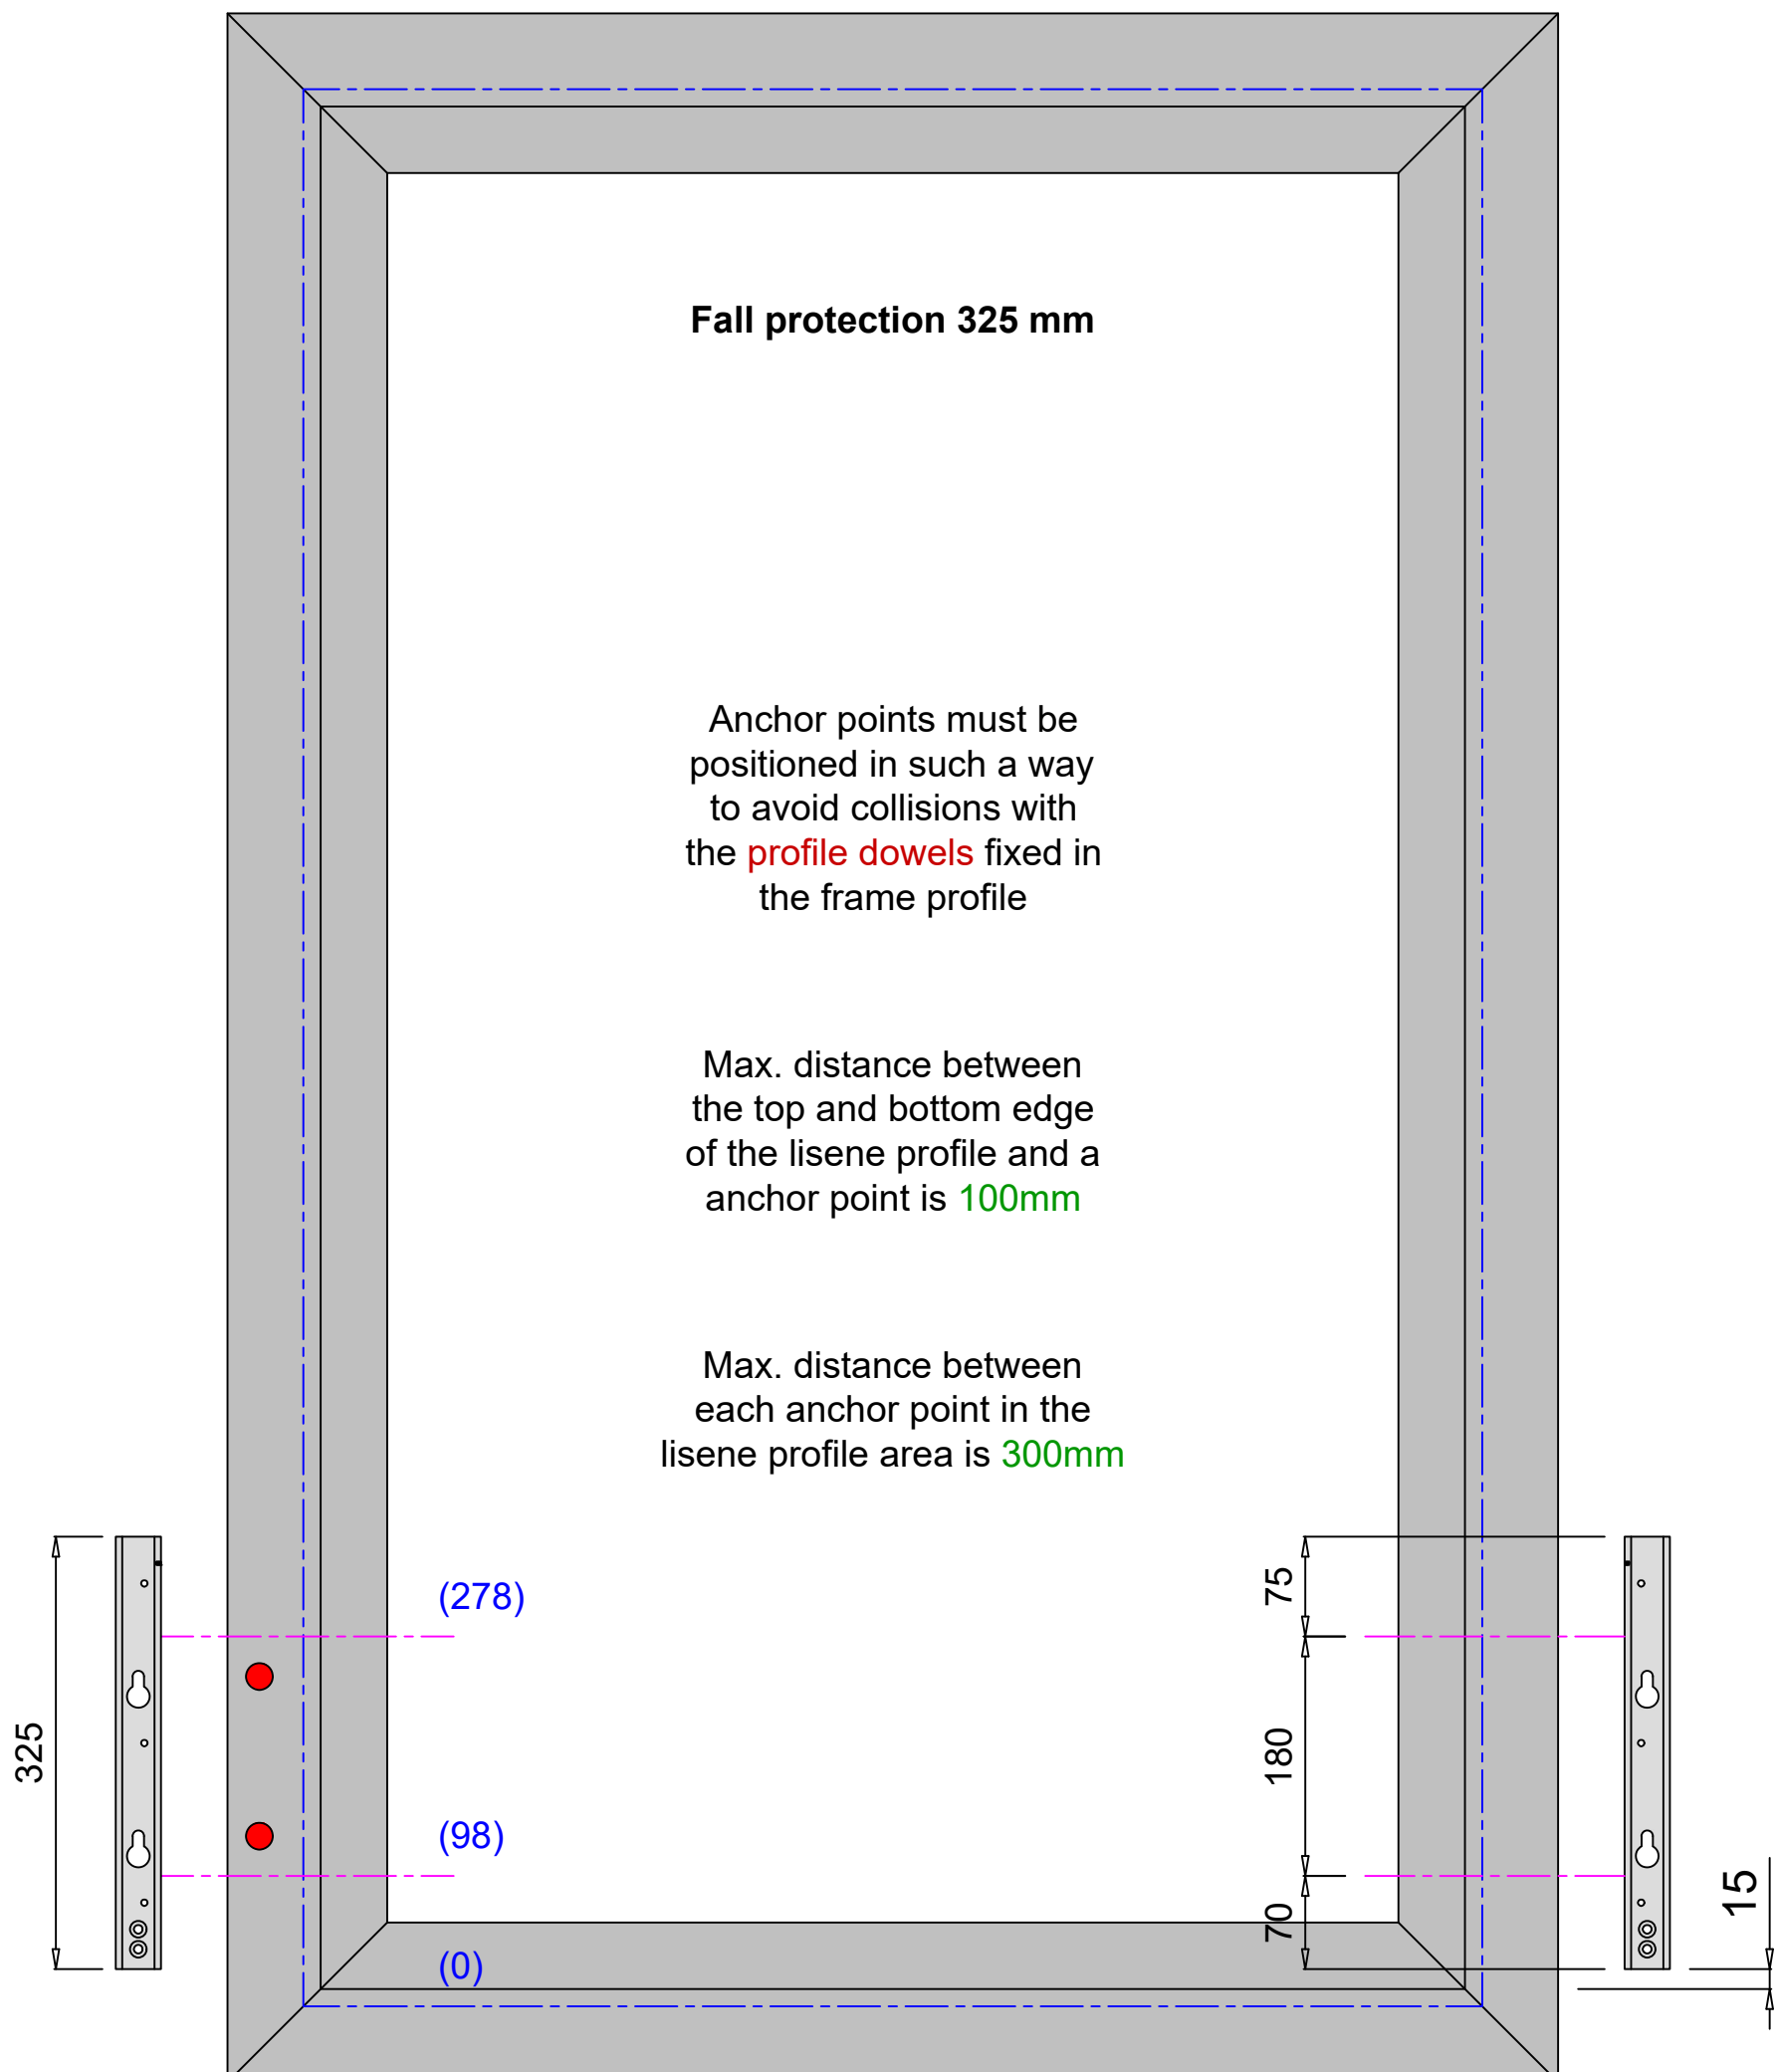

Foundations

As the fall protection system solution is programmed in the fitting module, the dimensions need to reference to the **fitting groove border**

The **anchor point holes** are marked

Please note!

** The middle anchor point is only valid while: fitting groove width > 925 mm

